


FOR VEND0 VUE GLASS FRONT ONLY

### Break In procedure

Locate port used to open the vendor on the side of the machine  
Drill a 1/4" diameter hole to the right of the plastic trim.

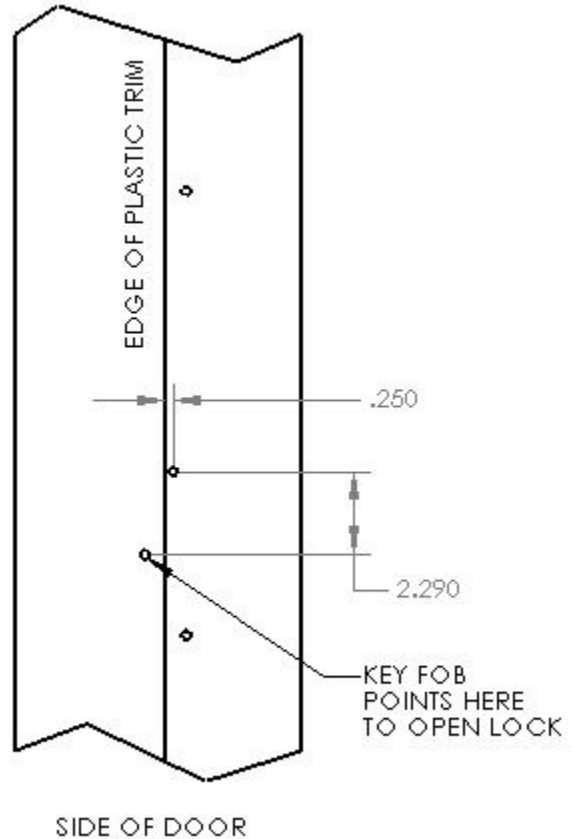

Using the probes and the TritEQ emergency battery pack, connect the black wire to the ground of the battery pack (outside of the jack) and the red wire to the center of the jack. Probe the motor terminals until the lock opens.  
Reverse the polarity of the probes to reverse the direction of the motor.

